

Welcome! to the setup process for your Futura Leather immersive sound system! This innovative furniture-integrated audio solution—featuring built-in speakers in your sofa, loveseat, and recliner—delivers rich, spatial sound directly through your seating for an unparalleled home theater experience. The system uses Broadcast Bluetooth for seamless wireless connection to compatible devices, such as your television, allowing synchronized audio across all pieces.

Important Notes Before Starting:

- Your TV must support Bluetooth audio output (most modern smart TVs do, including models from Samsung, LG, Sony, and Vizio). Check your TV's specifications if needed.
- The system model identifier is US13014M, which may appear as "Doer" (a branded Bluetooth device name) during pairing.
- Have your TV remote ready, and ensure the furniture is positioned near the TV (Bluetooth range is typically 30 feet/10 meters).
- Total setup time: 10-15 minutes.
-

Step-by-Step Connection Instructions Follow these steps in order for a smooth setup. If you encounter issues, see the Troubleshooting section below.

Step 1: Prepare and Power On the Furniture

1. Position the Furniture: Place your sofa, loveseat, and recliner in your desired setup location, ensuring they are within Bluetooth range of your TV (ideally 10-20 feet away, with minimal obstructions like walls).
2. Connect Power Cables:
 - Locate the power cord on each piece (usually attached to the underside or rear panel).
 - Plug each cord into a grounded electrical outlet. Use surge protectors if available to safeguard against power fluctuations.
 - Verify that all pieces are powered: Look for indicator lights on the main control panel that illuminate when connected.

3. Power On the System:

- On the sofa (the main unit), find the main control panel. This is a drop-down compartment located in the center back of the sofa—gently pull down the back to reveal it. You must power up the sofa with the main control panel FIRST, before powering up the other pieces of furniture. Your sofa will automatically connect to the other pieces when they are powered up.

SWITCH ON AND POWER UP THE MAIN PANEL FIRST, SO THAT BLUETOOTH CONNECTS TO MAIN CONTROL PANEL!

- Press the power button on the control panel. You should hear a soft chime or see the LED indicators light up, confirming the system is active.
- The loveseat and recliner will automatically sync with the sofa's central hub via Broadcast Bluetooth—no separate buttons needed.
-

Tip: If no lights or chime occur, double-check power connections and try a different outlet.

Step 2: Access Bluetooth Settings on Your TV

1. Turn On Your TV: Use your remote to power on the TV and navigate to a source with audio (e.g., a streaming app like Netflix or a connected device).
2. Open Settings Menu:
 - Press the Settings or Menu button on your remote (gear icon on many models).
 - Navigate to Sound, Audio, or Bluetooth (exact menu names vary by TV brand—e.g., "Sound Output" on Samsung, "Bluetooth" under "Remotes & Accessories" on LG).
3. Enable Bluetooth Pairing:
 - Select Bluetooth or Bluetooth Devices.
 - Turn Bluetooth On if it's not already enabled.
 - Choose Pair New Device, Add Device, or Scan to search for available devices.

Tip: If your TV has a dedicated Bluetooth audio mode, select it to route sound output wirelessly.

Step 3: Pair the Immersive Sound System

1. Locate the Device: In the list of available Bluetooth devices, look for:

- US13014M (full model name), or
- "Doer" (the friendly display name).

If it doesn't appear immediately, ensure the furniture is powered on and within range, then refresh the scan.

2. Initiate Connection:

- Select US13014M or "Doer" from the list.
- The TV will connect automatically via Broadcast Bluetooth, syncing audio across all furniture pieces. You'll see a confirmation message like "Connected" or "Paired Successfully."

3. Test the Connection:

- Play audio or video on your TV (e.g., a movie trailer or music).
- Sound should now emanate from the furniture speakers, creating an immersive effect with vibrations and directional audio synced to your seating.
- Adjust volume using your TV remote—the system mirrors the TV's audio levels. Volume, treble, bass and vibration may all be controlled using the controls on your main control panel.

Congratulations! Your immersive sound system is now active. Enjoy theater-like audio without external speakers.

Additional Features and Tips

- Volume and EQ Controls: Use the sofa's control panel for fine-tuning (e.g., bass boost for movies or balanced mode for music).
- Multi-Device Pairing: The system can connect to other Bluetooth sources (phones, tablets) via Broadcast Bluetooth, but only one at a time—disconnect from the TV first via settings.

- **Maintenance:** Keep the control panel flap closed when not in use to prevent dust buildup. Avoid exposing furniture to direct sunlight or moisture

Troubleshooting Common Issues If the setup doesn't go as planned, try these fixes:

Issue	Possible Cause	Solution
No Power Indicators	Loose power cord or faulty outlet	Re-plug cords; test outlet with another device. If persists, contact support.
Device Not Found in Bluetooth Scan	Out of range or interference	Move TV/furniture closer; turn off nearby Wi-Fi routers or microwaves temporarily. Restart TV and power cycle furniture (unplug for 30 seconds).
Connection Fails or Drops	Interference or TV Bluetooth glitch	Forget the device in TV settings, rescan, and repair. Ensure TV firmware is updated.
No Sound from Furniture	Audio output not routed to Bluetooth	In TV settings, set "Audio Output" to Bluetooth or External Speaker. Test with headphones to isolate TV issue.
Low Volume or Distortion	Sync delay or Broadcast Bluetooth lag	Check TV audio settings for "Dolby" or "Surround" modes. Reset system by holding power button for 10 seconds.
"Doer" vs. US13014M Mismatch	Display variation	Both refer to the same device—use whichever appears. If neither shows, verify model with purchase receipt.